


PURALOX CATALOX

High-Purity Calcined Aluminas

Sasol Performance Chemicals



SASOL

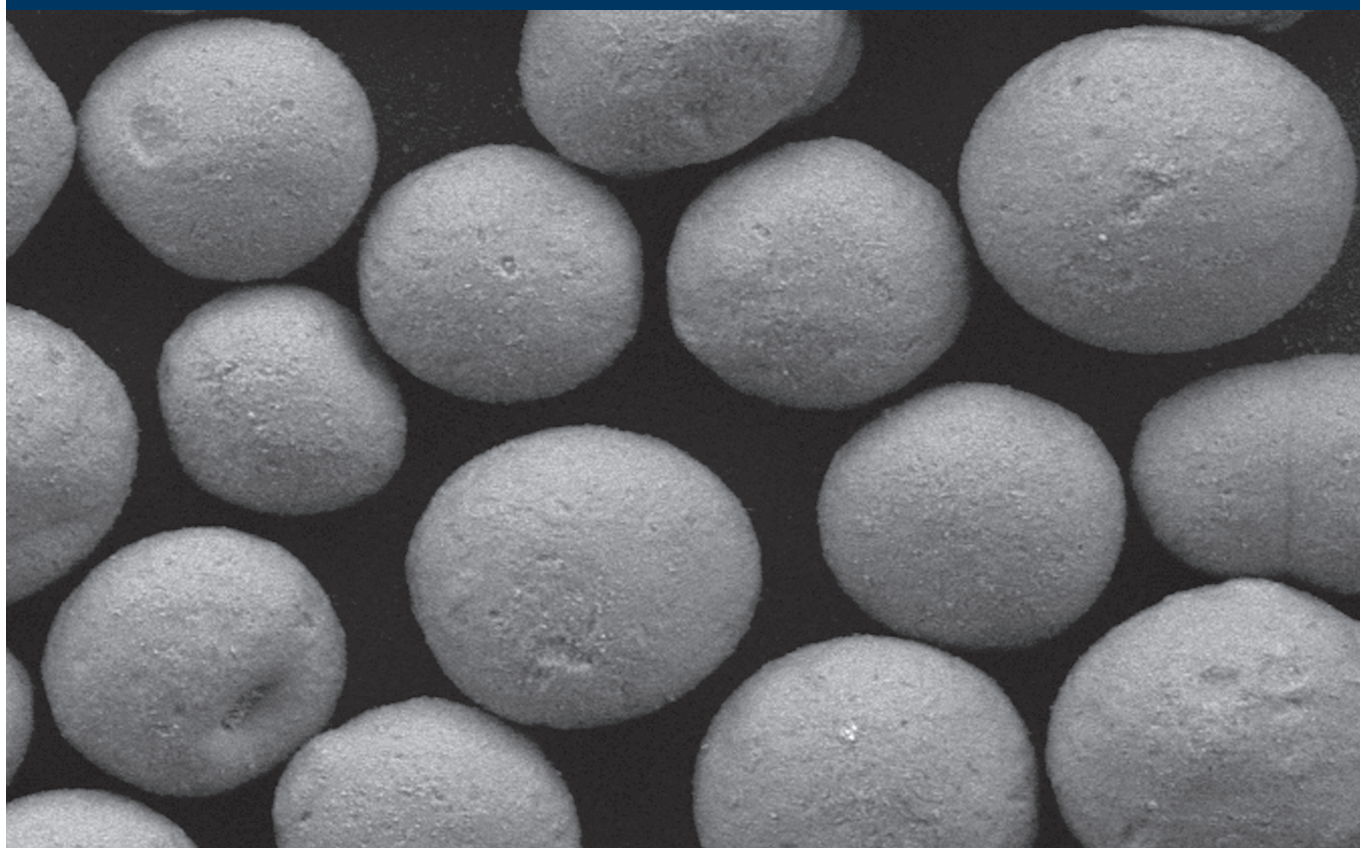

Content

| | |
|---|-----------|
| About Us | 3 |
| 1. Alumina Production Process | 4 |
| 2. PURALOX/CATALOX | 5 |
| 2.1 High-Purity Aluminas..... | 5 |
| 2.2 Advantages of PURALOX and CATALOX..... | 6 |
| 2.3 PURALOX and CATALOX for Fluid Bed Application | 7 |
| 2.4 Calcination..... | 7 |
| 2.5 Doped Aluminas | 9 |
| 3. Technical Data | 10 |
| 3.1 High-Density Aluminas..... | 10 |
| 3.2 High- and Medium-Porosity Aluminas..... | 10 |
| 4. Product Information | 12 |
| 4.1 Storage and Transfer | 12 |
| 4.2 Safety and Handling..... | 12 |
| 4.3 Technical Support | 12 |
| 5. Certifications..... | 14 |
| 6. Analytical Methods..... | 14 |
| 6.1 Element Analysis..... | 14 |
| 6.2 Crystallite Type and Average Crystalline Phases | 14 |
| 6.3 Particle Size Distribution | 14 |
| 6.4 Surface Area Analysis | 14 |
| 6.5 Pore Volume and Pore Size Distribution..... | 14 |
| 6.6 Differential Scanning Calorimetry (DSC)..... | 14 |

About Us

Sasol Performance Chemicals develops and markets a broad portfolio of organic and inorganic commodity and specialty chemicals and comprises three key business divisions: Organics, Advanced Materials and Wax. Our offices in 18 countries serve customers around the world with a multifaceted portfolio of state-of-the-art chemical products and solutions for a wide range of applications and industries.

Surfactants, surfactant intermediates, fatty alcohols, linear alkyl benzene (LAB), short-chain linear alpha olefins, mineral oil-based and synthetic paraffin waxes, high-purity and ultra-high-purity alumina as well as high-quality carbon solutions form the basis of our key product range.

As individual as the industrial applications they serve, the tailor-made solutions offered by our products create real business value for customers. Ongoing research activities result in a continuous stream of innovative product concepts that help our customers position themselves successfully in future markets.

Our products are used in countless applications in our daily lives to add value, security and comfort. Typical examples include detergents, cleaning agents, personal care, construction, paints, inks and coatings, metalworking and lubricants, hot-melt adhesives, bitumen modification and catalyst support for automotive catalysts and refineries as well as other specialty applications including oil and gas recovery, agriculture, plastic stabilization, and polymer production. Every day, our researchers explore ways to improve our products and develop innovations that improve the quality of people's lives.



1. Alumina Production Process

Sasol Inorganics produces high- and ultra-high-purity aluminas primarily through synthetic aluminum alkoxide processing routes. The alumina is produced either as co-product with synthetic linear alcohols (Ziegler method) or directly from aluminum metal (on-purpose route).

Several production steps must be completed to produce the different alumina-based products. In the first step, an aqueous intermediate (alumina slurry) is produced, which is further tailored in the subsequent processing steps to obtain the various products sold on the market. These can be alumina hydrates, calcined aluminas and doped versions thereof.

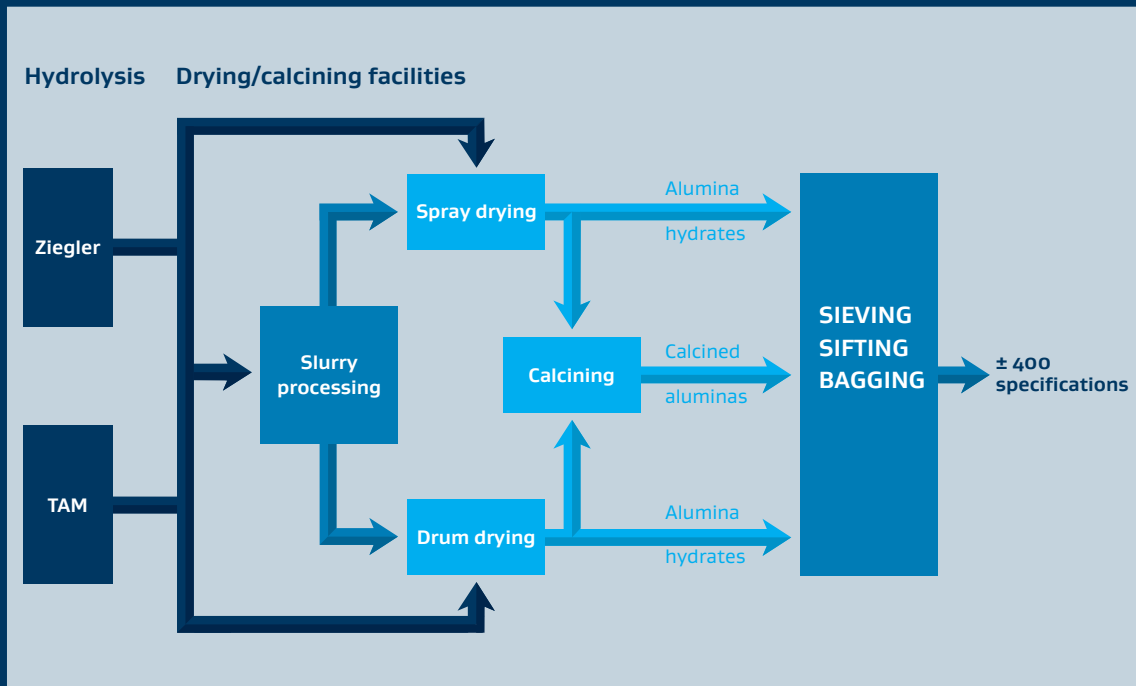


Figure 1: Schematic for the alumina manufacturing process

2. PURALOX/CATALOX

2.1 High-Purity Aluminas

PURALOX and CATALOX are the trademarks for the aluminium oxides derived from the controlled activation of PURAL and CATAPAL high-purity alumina hydrates. PURAL and CATAPAL are the respective trademarks of synthetic, high-purity boehmite (AlOOH) and bayerite ($\text{Al}(\text{OH})_3$), manufactured in Brunsbüttel, Germany, and Lake Charles, USA. The proprietary process used in the preparation of these high-purity aluminium oxides allows Sasol to control many important physical properties and hence “tailor-make” a product for your needs. Both PURALOX and CATALOX are available as white, free flowing powders with high-purity and consistency. Due to the precisely controlled processing conditions during and after manufacturing these aluminium oxides, PURALOX and CATALOX make excellent starting materials for the catalyst industry. They provide excellent specific catalytic activities, high surface area stability, and low attrition loss.

PURALOX and CATALOX are arguably the best starting materials for the catalyst industry where consistency and an stable nature of the support is highly desired. These characteristics are of great importance for fluid and slurry bed applications. Due to their high thermal stability, PURALOX and CATALOX are widely used raw materials for washcoat formulations in environmental emission-control catalysts. Recent developments have found other suitable uses for these materials in applications outside catalysis such as polishing, chromatography, adsorbents and gas separation.




2.2 Advantages of PURALOX and CATALOX

Unlike other alumina manufacturing processes which use less pure bauxite derivatives as a starting material, Sasol has pioneered a process based on aluminium alkoxide which produces synthetic alumina hydrates of high purity. Examples of some trace impurities are shown in table 1. Sasol produces aluminium oxides with a wide range of possible particle size distributions (figure 2). The range of possible average particle sizes stretches from 8 micrometers to 2.5 millimeters. Other pore size distributions are available on request.

Dry milled versions of our alumina are available under the tradename **PURALOX UF** and **CATALOX UF** as well. These ultra fine materials comprise mean particle sizes in the range of typically 2–6 µm, which can be tailored upon customer request.

Ultra high-purity grade (**PURALOX UHPA**) are available upon request.

Figure 2:
Areas of particle size distribution of
PURALOX and CATALOX aluminas

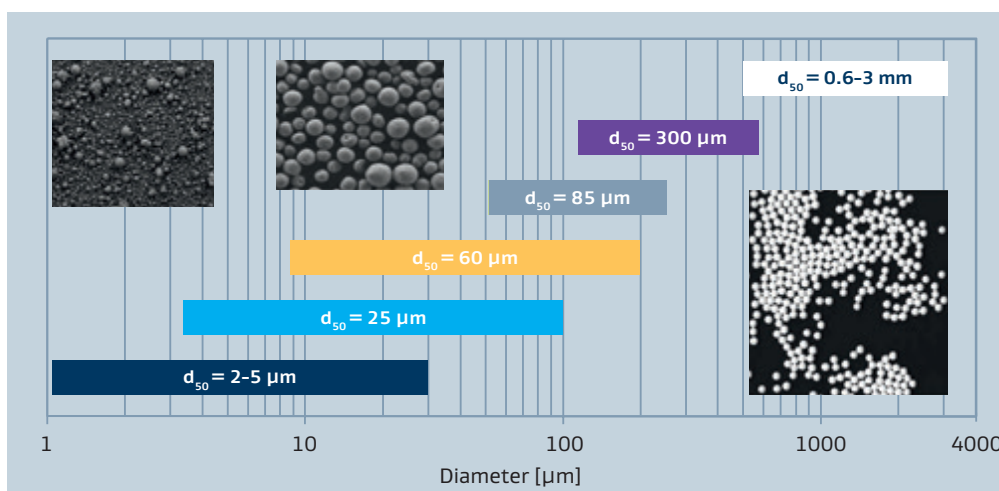

| Chemical purity of PURALOX and CATALOX Aluminas | |
|---|---------------|
| Impurity | ppm (typical) |
| Na ₂ O | <20 |
| Fe ₂ O ₃ | 50–100 |
| SiO ₂ | 50–120 |

Table 1


| Purity of PURALOX UHPA Aluminas | |
|---------------------------------|---------------|
| Impurity | ppm (typical) |
| Na ₂ O | 1 |
| Fe ₂ O ₃ | 3 |
| SiO ₂ | 3 |

Table 2

2.3 PURALOX and CATALOX for Fluid Bed Application

The unique ability of Sasol to adjust certain physical properties makes the aluminas perfect for a variety of applications. For example, fluid-bed applications demand for rather coarse aluminas that also exhibit a high level of attrition resistance. Our PURALOX SCCa and CATALOX SCCa series is optimized to meet these requirements. Figure 3 shows a typical particle size distribution. Other ranges are also available upon request.

Figure 3:
Particle size distribution
and SEM-picture of a typical PURALOX
SCCa-product

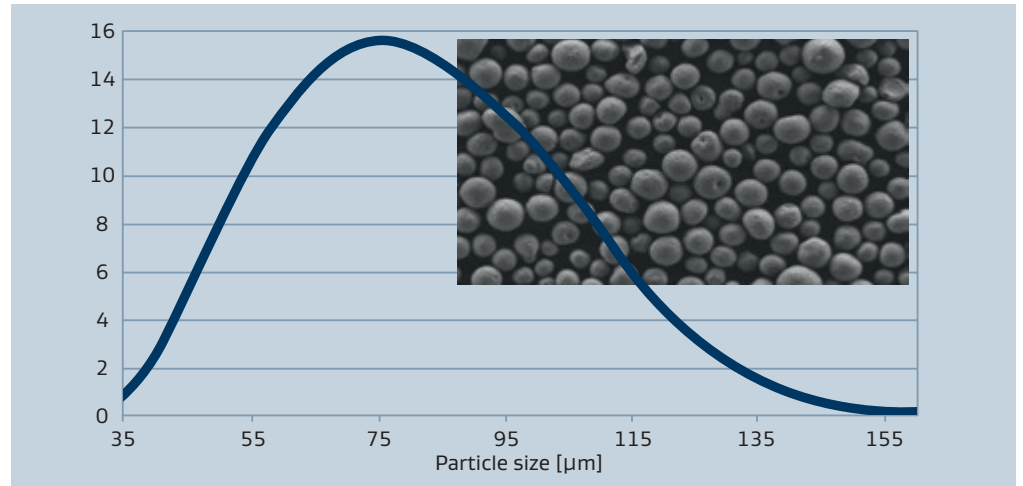


2.4 Calcination

The final crystalline phase and physical properties of the alumina depend on the physical properties of the starting material as well as the calcination process. Our calcined aluminas are predominantly based on high-purity boehmite as the starting alumina hydrate.

Typical calcination temperatures of the boehmite lie within 600–1000 °C. Applying such temperatures, the physically and chemically bound water is removed, transforming the hydrate into an oxide. High temperature calcination leading to α -Alumina can also be applied.

Figure 4:
Sequence of phase transitions

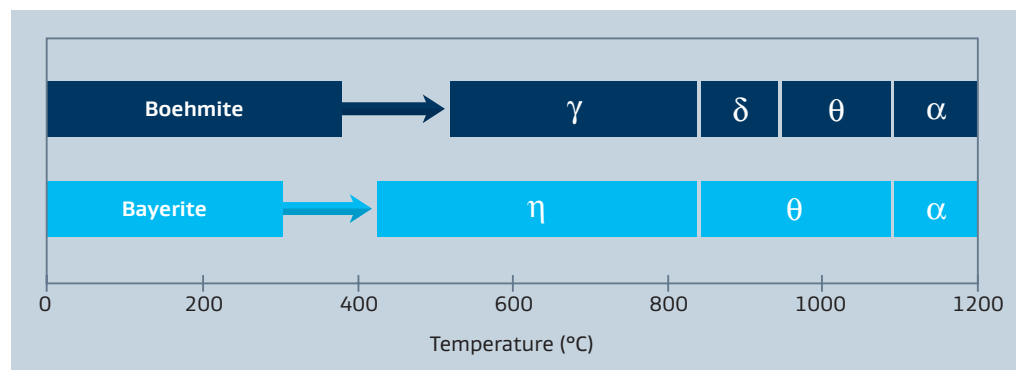

The physical properties of the aluminum oxides are to a large extent adjusted at the stage of the corresponding hydrates by varying their crystallite size and shape. This way, aluminas with tailored porosities are accessible, ranging from high-density to high-porosity materials. These two border cases are illustrated in Figure 5.

Properties such as the crystalline phase, surface area and porosity can be altered significantly by varying the calcination process. Figure 6 shows a graphic representation of the relationship between the surface area, pore volume and average pore radius. Depending on the physical characteristics of the initial alumina hydrate Sasol is able to prepare aluminum oxides with various pore volumes.

Figure 5:
Electron tomography of
a) high-density
b) high-porosity
aluminas showing different
crystallite arrangements.


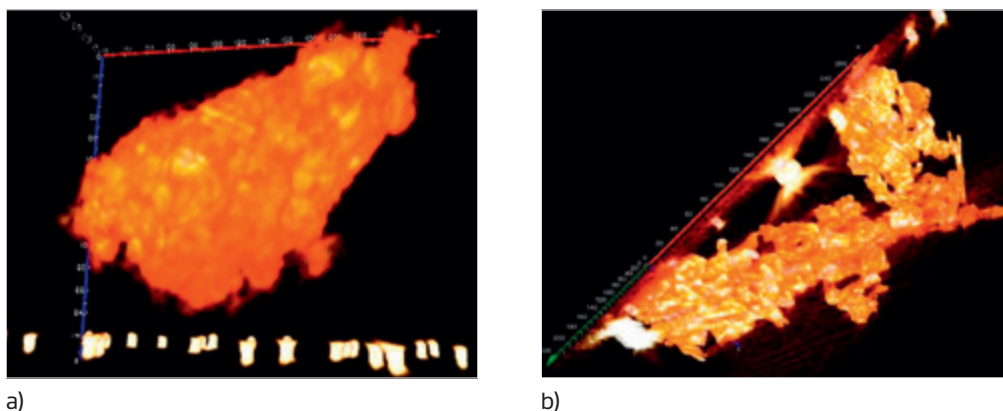


Figure 6:
Alumina grades
with different porosities

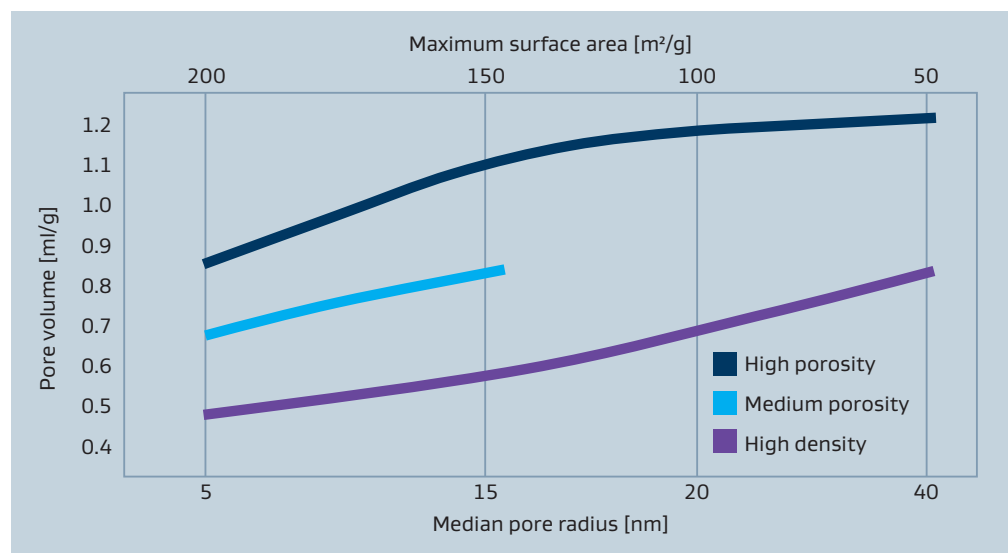

2.5 Doped Aluminas

Sasol aluminas are also available as doped or even multi-doped versions (e.g. La, Ce, Ti, Zr). The resulting interplay of well-defined physical properties and chemical modifications is a further step towards optimized support materials for various applications like emission control or refinery catalysts. As an example, the addition of lanthanum-oxide improves the thermostability of the base alumina as it can be seen in figure 8.

More details about doped aluminas can be found in our “Sasol Doped Aluminas” brochure.

Figure 7:
SEM-EDX illustration
of a La-doped alumina


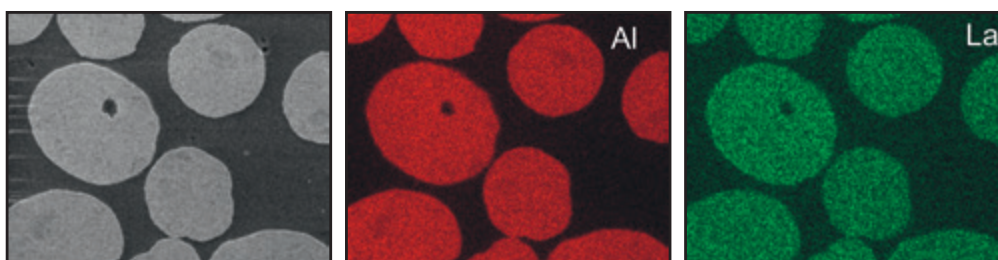


Figure 8:
Thermostability of pure,
La- and Ba-doped aluminas

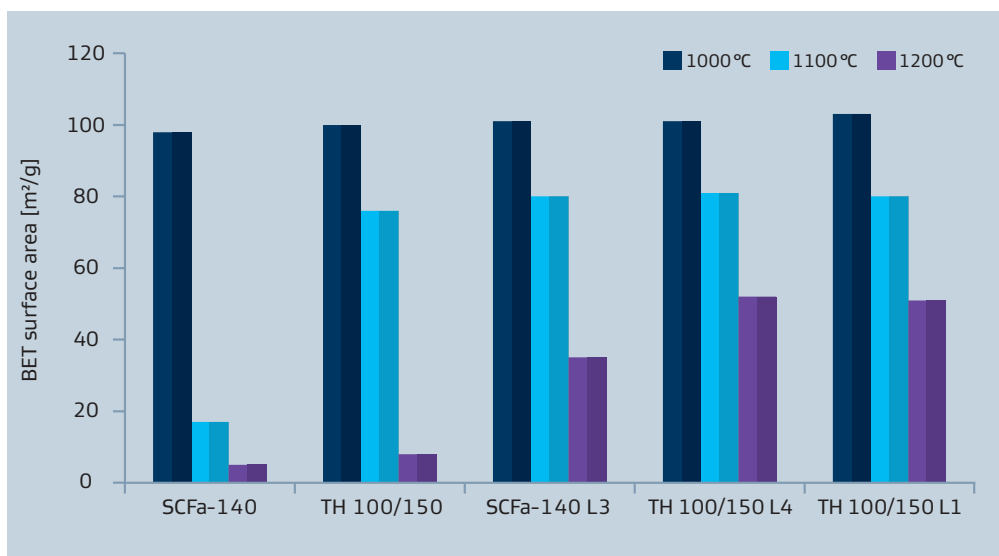

3. Technical Data

3.1 High-Density Aluminas

| Typical chemical and physical properties | | PURALOX/ CATALOX SBa series | PURALOX/ CATALOX SCFa series | PURALOX/ CATALOX SCCa series | PURALOX SCFa-140 L3 |
|--|---------------------|-----------------------------------|------------------------------------|------------------------------------|------------------------|
| Al ₂ O ₃ | [%] | 98 | 98 | 98 | 95 |
| Na ₂ O | [%] | 0.002 | 0.002 | 0.002 | 0.002 |
| La ₂ O ₃ | [%] | – | – | – | 3 |
| L.O.I. | [%] | 2 | 2 | 2 | 2 |
| Loose bulk density | [g/l] | 500–800 | 500–800 | 600–850 | 500–700 |
| Particle size (d ₅₀) | [μm] | 45 | 25 | 60–150* | 30 |
| Range of s. a. (BET)** | [m ² /g] | 90–210 | 90–210 | 90–210 | 140 |
| Pore volume | [ml/g] | 0.35–0.50 | 0.35–0.50 | 0.35–0.50 | 0.5 |
| Pore radius | [nm] | 4–10 | 4–10 | 4–10 | 8 |
| Thermal stability: | | | | | |
| Surface area: 24h/1100 °C | [m ² /g] | 15 | 15 | 15 | 80 |
| Surface area: 24h/1200 °C | [m ² /g] | 5 | 5 | 5 | 40 |

3.2 High- and Medium-Porosity Aluminas

| Typical chemical and physical properties | | CATALOX HTa HTFa 101 | PURALOX TH 100/150 | PURALOX TM 100/150 | PURALOX TH 100/150 L4 |
|--|---------------------|----------------------------|-----------------------|-----------------------|--------------------------|
| Al ₂ O ₃ | [%] | 96 | 98 | 98 | 96 |
| Na ₂ O | [%] | 0.002 | 0.002 | 0.002 | 0.002 |
| La ₂ O ₃ | [%] | – | – | – | 4 |
| L.O.I. | [%] | 4 | 2 | 2 | 2 |
| Loose bulk density | [g/l] | 200–350 | 300–500 | 300–500 | 300–500 |
| Particle size (d ₅₀) | [μm] | 15–40 (HTa) 5–10 (HTFa) | 35 | 35 | 35 |
| Range of s. a. (BET)** | [m ² /g] | 75–115 | 150 | 150 | 150 |
| Pore volume | [ml/g] | 0.70 | 0.8–1.1 | 0.7–1.0 | 0.8–1.0 |
| Pore radius | [nm] | 12–17 | 11 | 11 | 11 |
| Thermal stability: | | | | | |
| Surface area: 24h/1100 °C | [m ² /g] | 40 | 80 | 50 | 80 |
| Surface area: 24h/1200 °C | [m ² /g] | 5 | 20 | 10 | 50 |

Chemical purity: C: 0.05 %, SiO₂: 0.01–0.015 %, Fe₂O₃: 0.005–0.015 %, TiO₂: 0.01–0.30 %

* Figures show the range of particle size distribution (d₅₀) available upon request.

** Figures show the range of surface areas (+/- 10m²/g) available on request.

Further specialty grades are available upon request.

Analytical methods see page 14.



4. Product Information

4.1 Storage and Transfer

PURALOX and CATALOX aluminas are dry, pure aluminium oxides, however, since all aluminas adsorb atmospheric moisture, facilities should be designed to avoid excessive exposure to moist air. By excluding moisture from the storage of alumina, shelf life is extended. PURALOX and CATALOX are abrasive materials.

Therefore, handling and storage equipment should be abrasion resistant carbon steel, aluminium or polypropylene-lined steel.

4.2 Safety and Handling

PURALOX and CATALOX aluminas are classified as a non-toxic, non-flammable nuisance dust. Exposure to high concentrations of dust may cause physical irritation. Repeated or prolonged exposure with skin may result in dryness and irritation.

Handling procedures should be designed to minimize inhalation and skin exposure.

Normal good housekeeping and operating procedures should ensure personnel safety.


For doped aluminas please check the corresponding material data safety sheet.

4.3 Technical Support

Sasol is committed to customer satisfaction and we offer a full range of technical support to complement the products.

Technical sales and support is available worldwide to help you choose the right alumina for your end use, as well as to provide guidance on the aluminas' safe and efficient handling.

The products described in this brochure are small indications of our capability. We look forward to discussing specific technical requirements with you in detail so that together we can develop unique products for your application.

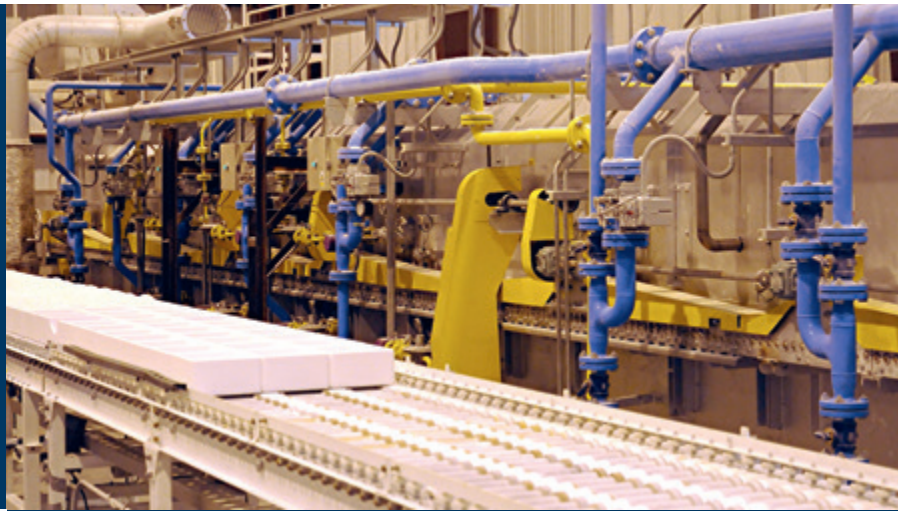

5. Certifications

All Sasol Performance Chemicals locations worldwide are certified to DIN ISO 9001/14001 and to OHSAS 18001 standards (Occupational, Health and Safety Assessment Series), and the German plants additionally comply with EMAS III (Eco Management and Audit Scheme).

Our production sites operate according to an internationally recognised, integrated quality, environmental and safety management system that has been established at the sites for many years.

6. Analytical Methods

6.1 Element Analysis

Alumina powder is quantitatively brought into solution by using acids and then analyzed by ICP, atomic emission. Additionally, X-ray fluorescence spectroscopy is used.

6.2 Crystallite Type and Average Crystalline Phases

Powdered samples of the alumina are analyzed by using X-Ray Diffractometry (XRD) on either a Siemens D5000 or a Philips X'Pert diffractometer. The resulting diffractogram enables the laboratory to identify the crystal structure of the material.

6.3 Particle Size Distribution

The particle size distribution of alumina may be measured by various instruments, namely, Cilas Granulometer 1064 supplied by Quantachrome, Malvern Mastersizer or Luftstrahlsieb (air sieve) supplied by Alpine.

6.4 Surface Area Analysis

The surface area of the alumina is measured by using an instrument supplied by Quantachrome (Nova series) or by Micromeritics (Gemini series). The method entails low temperature adsorption of nitrogen at the BET region of the adsorption isotherm.

6.5 Pore Volume and Pore Size Distribution

The boehmite is first calcined at 550 °C for three hours in preparation for analysis. The porosity is measured by nitrogen desorption using Autosorb instruments supplied by Quantachrome.

6.6 Differential Scanning Calorimetry (DSC)

Netzsch STA 449C Jupiter, Setaram 92 or Perkin Elmer instruments may be used with a selected heating rate to obtain the exothermic and endothermic transitions of alumina. Additional test methods are available for other physical properties upon request.





SASOL

At Your Service

Sasol Performance Chemicals

Advanced Materials

Anckelmannsplatz 1, 20537 Hamburg, Germany
Telephone +49 40 63684 1000 Fax +49 40 63684 3700
inorganics@de.sasol.com

Sasol Germany GmbH

Anckelmannsplatz 1, 20537 Hamburg, Germany
Telephone +49 40 63684 1245 Fax +49 40 63684 3626
inorganics@de.sasol.com www.sasolgermany.de

Sasol Chemicals North America LLC

12120 Wickchester Lane, Houston, Texas 77079-2990, USA
Telephone +1 281 588 3000 Fax +1 281 588 3589
inorganics@us.sasol.com www.sasolnorthamerica.com

Sasol Chemicals Japan KK

P.O. Box 46 St. Luke's Tower 35 F, 8-1 Akashicho Chuo-ku, Tokyo 104-6591, Japan
Telephone +81 (3) 3248 6711 Fax +81 (3) 3248 6715
adm@sasoljapan.com

www.sasolalumina.com

www.sasol.com

Source reference

Cover: Sasol Germany GmbH, p. 3: Sasol Ltd., p. 5 - 9, p. 11, p. 13, p. 15: Sasol Germany GmbH

Sasol is a registered trademark of Sasol Ltd. Product trademarks displayed in this document are the property of the Sasol Group of companies, except where it is clear from the context that not. Users of this document are not permitted to use these trademarks without the prior written consent of their proprietor. All rights not expressly granted are reserved.

Disclaimer: The information contained in this document is based on Sasol's knowledge and experience at the time of its creation. We reserve the right to make any changes to this document or the products described therein, as a result of technological progress or developments. This information implies no liability or other legal responsibility on our part, including with regard to existing third-party patent rights. In particular, no guarantee or warranty of properties in the legal sense is implied. The customer is not exempted from the obligation to conduct careful inspection and testing of incoming goods.

Reference to trademarks used by other companies is neither a recommendation, nor should it give the impression that products of other companies cannot be used. All our business transactions are governed exclusively by our General Business Conditions.